EDF LED Lighting System User Manual

Thank you for purchasing this lighting system. To get the full benefit of this lighting system please read this user manual thoroughly.

【Features】

- Green and red alternate flashing wingtip navigation LED lights
- Large super bright LED headlight/landing light
- Constant on red LED tail light
- The above lights can be turned on and off via a spare channel on your receiver/transmitter
- Throttle variable "after burner" red LED's

【Specifications】

- Power Input voltage: 3S or 4S LiPo provided by dedicated leads connected via JST-XH balance connector
- Rx1 (Aux1) input voltage range: 4.8V - 6V
- Maximum current: 400mA
- Weight: 50g

【Wiring Diagram】

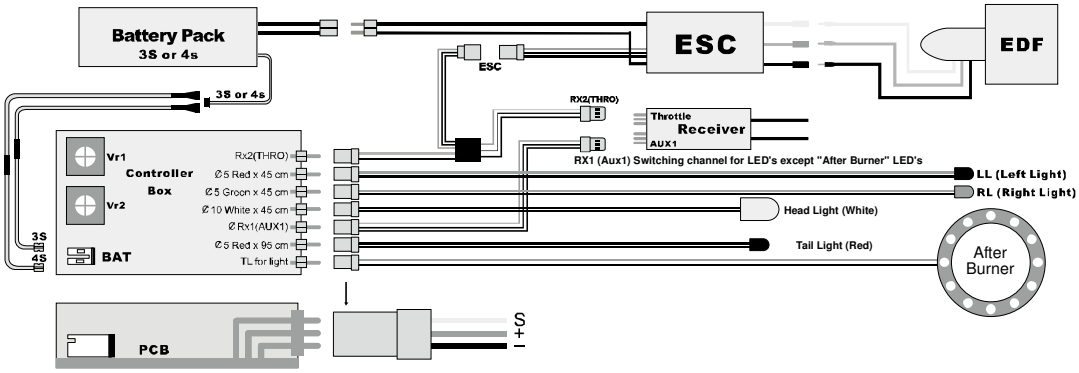

Vr1 adjusts the on/off set point for all LED's except the "After Burner" LED's.
Vr2 adjusts the on point for the "After Burner" LED's. Make adjustments with throttle at zero.
Please Note: The "After Burner" LED strip can be cut down every 3rd LED if required.

【Cautions】

- Please read this operating manual carefully before installing and using this product
- Do not use the voltages beyond the above stated maximum voltages
- Do not use this product in the rain and/or damp conditions to avoid damaging the product
- Do not disassemble or modify in any way
- Please keep this User Manual for future reference

【Warranty and Service】

We warranty this product for a period of one year (12 months) from the date of purchase. In the event of a problem, proof of purchase will be required. The Warranty does not cover: damage due to wear, overloading, crash damage, incorrect voltages and improper handling or using additional accessories.

4-Max does not accept any liability whatsoever with regards to any injury or damage caused by advice contained within or not contained within this user manual. www.4-Max.co.uk